ahti interiors™

Installation Manual
Panduan Instalasi






Product
Produk

Forseti Concealed Ceiling Shower Set

Code
Kode


F01-CSC01

Colour
Warna

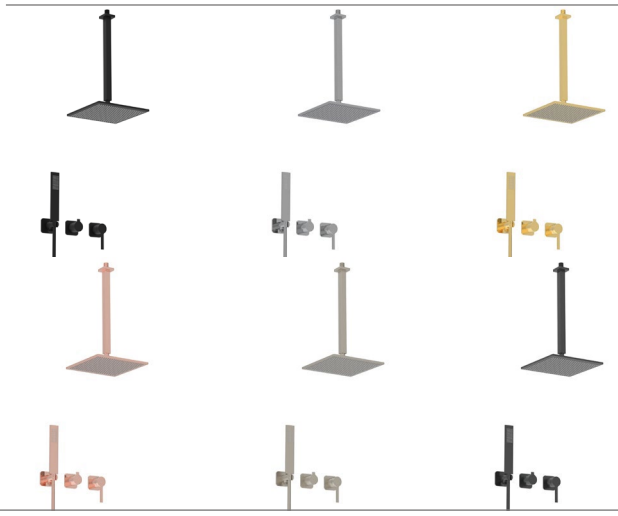


Dimensional Drawing
Gambaran Ukuran


Front View
Tampak Depan

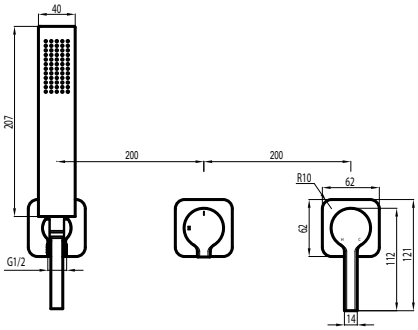

Side View
Tampak Samping

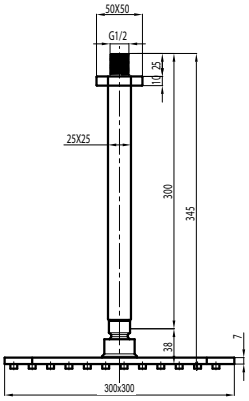

Top View
Tampak Atas

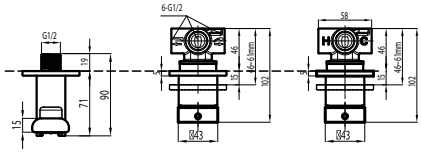

Box Contents
Isi Kotak


Shower Head



Shower Handle Holder




Mixer Handle Kit

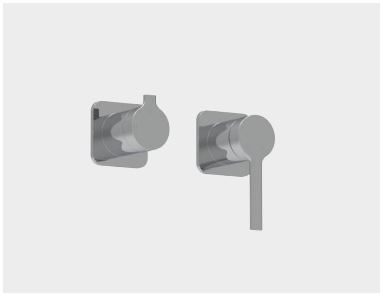

Baldr Shower Handle




Concealed Mixer Valve

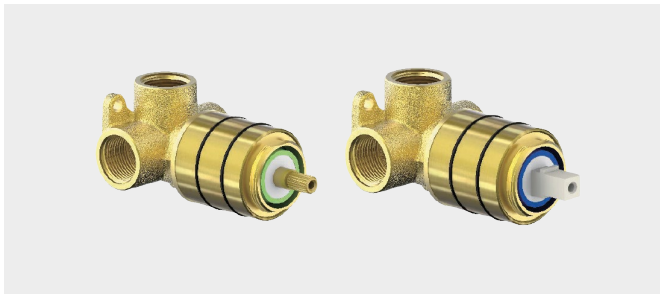

Designed In London


Ahti Interiors Ltd. 3 Lyttleton Road, London, N2 0DR, UK

ahti interiors™

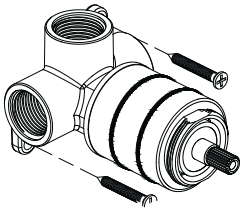


1. Screw in-wall body into wall structure with provided screws.

   Sekrupkan badan mixer ke struktur dinding dengan sekrup yang disediakan.

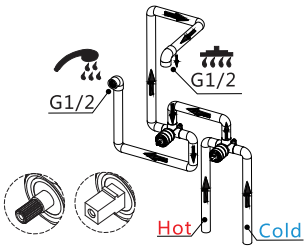


2. Connect left to hot, right to cold with G1/2, then link the mixer to the diverter, shower handle, and bath spout.

   Hubungkan pipa kiri ke air panas dan kanan ke air dingin dengan G1/2, lalu sambungkan mixer ke diverter, gagang shower serta spout bak.

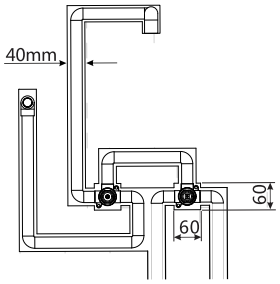


3. Ensure at least 60 mm between hot and cold pipes and embed them 40 mm into the wall.

   Pastikan jarak pipa air panas dan dingin minimal 60 mm dan tanamkan pipa sedalam 40 mm ke dalam dinding.

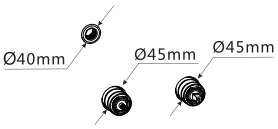


4. Use the templates to mark 45 mm and 40 mm holes, then drill them.

   Gunakan template untuk menandai lubang 45 mm dan 40 mm, lalu bor.

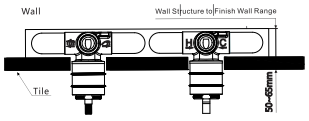


5. Embed pipe 50-65mm from the finished wall surface. Ensure pipes are securely fastened before tiling.

   Tanam pipa 50-mm dari permukaan dinding yang sudah jadi. Pastikan pipa terpasang dengan kuat sebelum pemasangan ubin.

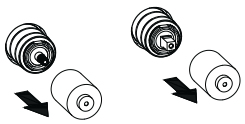


6. Remove cap from mixer valve.

   Lepas penutup mixer valve.

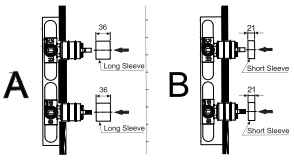


7. Choose sleeve based on how far your In-wall protrudes from finish wall and slide. Discard any extras.

   Pilih selongsong sesuai seberapa jauh in-wall menonjol dari dinding akhir, lalu pasang. Buang sisanya. yang tidak diperlukan.

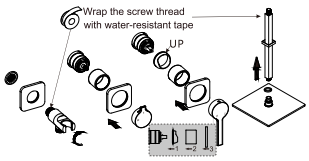

8. Align the faucet with the wall mount and secure it, ensuring everything is level and tight.


   Sejajarkan keran dengan dudukan dinding, lalu kencangkan hingga semuanya rata dan aman.

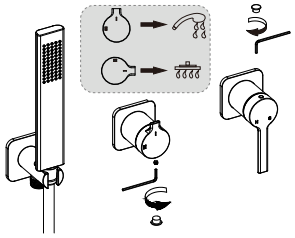

9. Use a hex key to tighten the fixing pin.

   Gunakan kunci hex untuk mengencangkan pin pemasangan.

ADDITIONAL TIPS

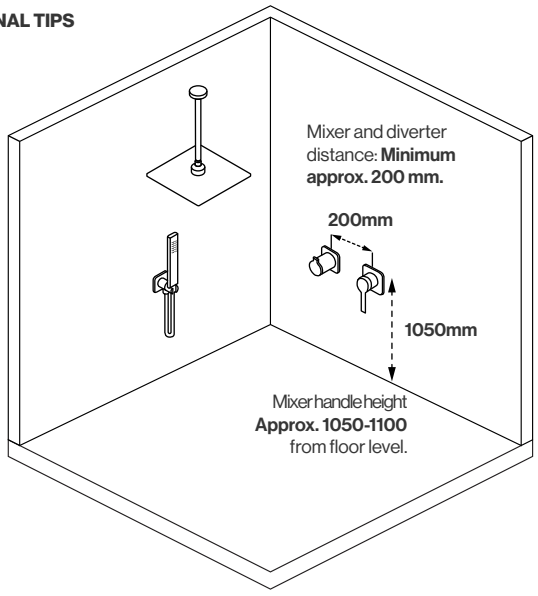

We recommend installing the diverter and mixer on a separate side wall to **prevent direct water contact** when the shower is turned on.

Need Assistance?

Scan QR Code or contact on our WhatsApp **0851 8321 6951**