



5.

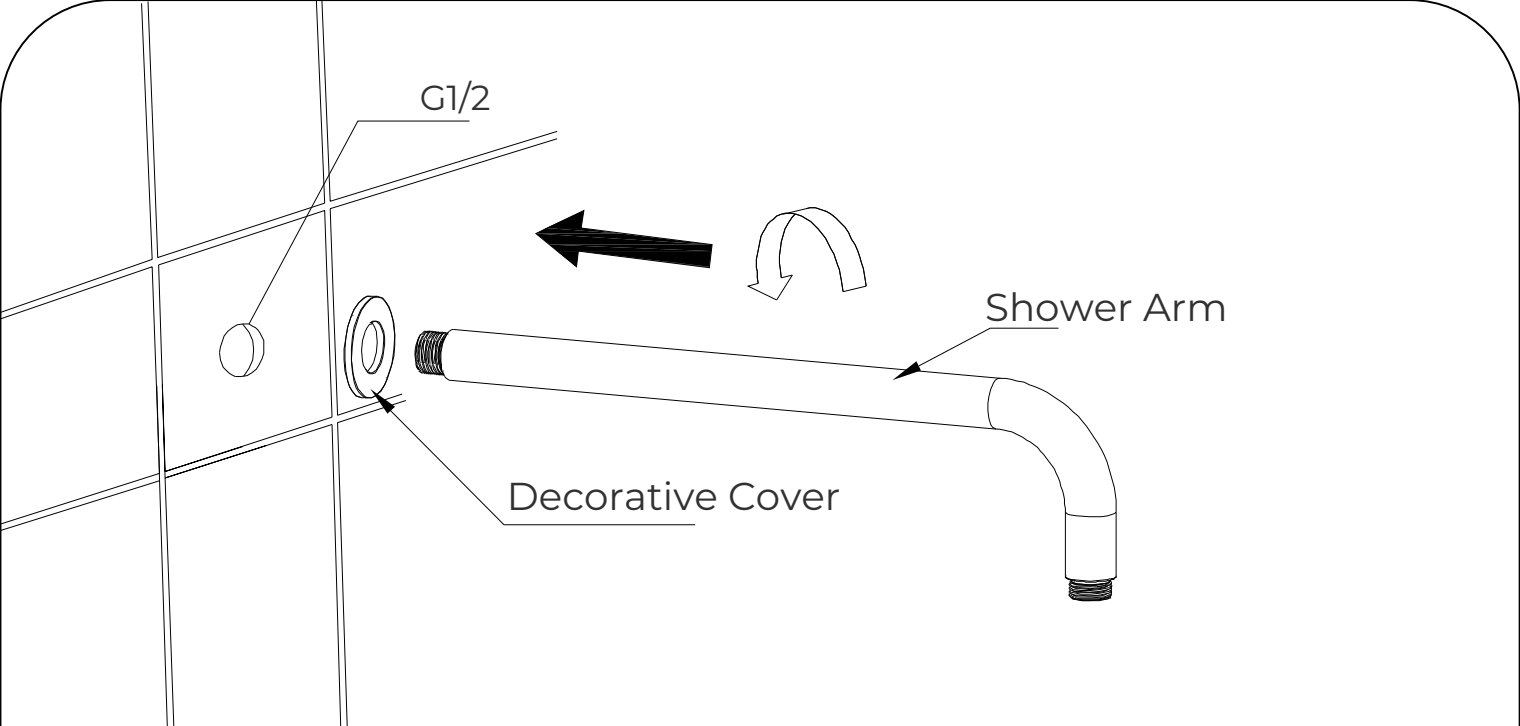

Align the shower arm assembly with the wall mount and secure it in place. Ensure all components are level and properly fastened. Use water proof tape where necessary.

6.

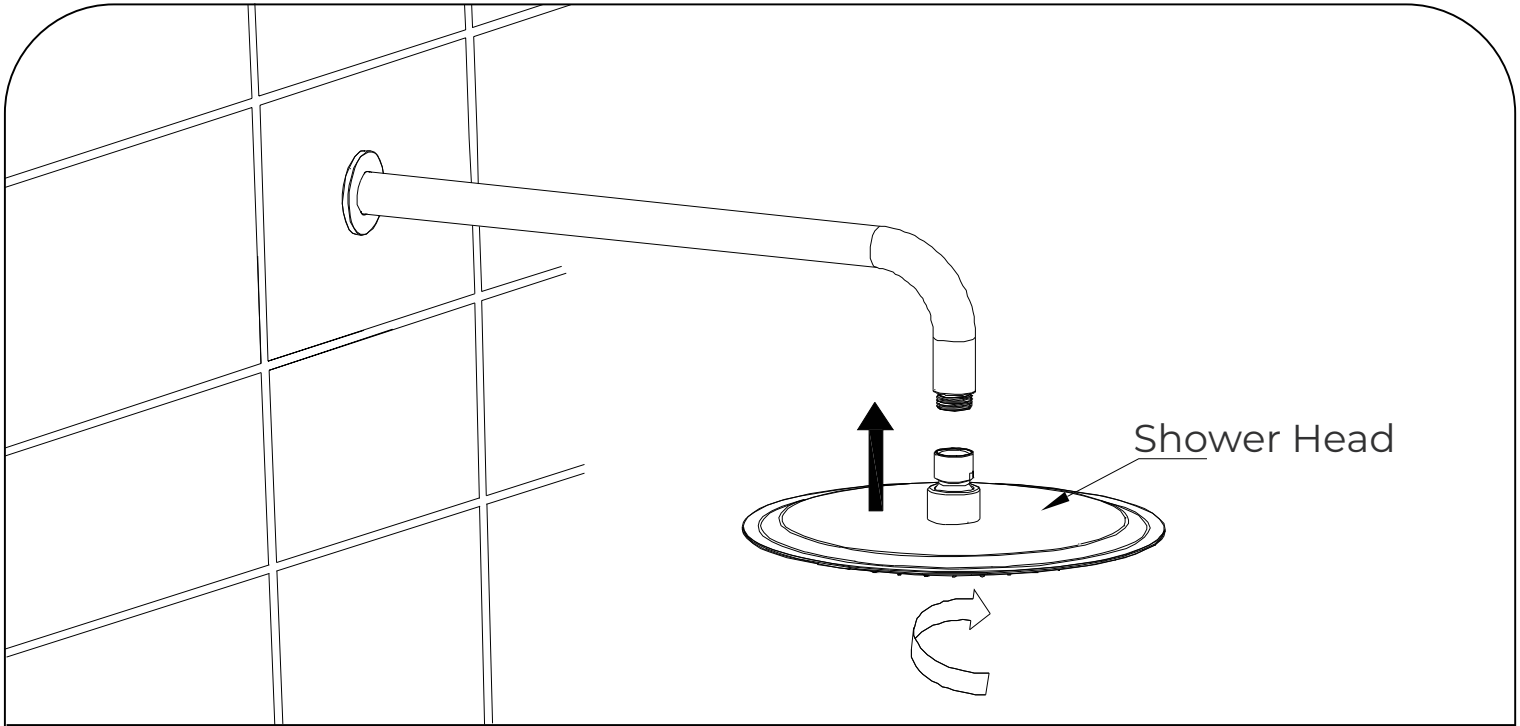

Attach the shower head to the wall pipe.

Installation Manual


B01-ODS01

Installation and Usage Instruction


Box Contents

No.	Items	Qty
1.	Decorative Cover	1
2.	Shower Arm	1
3.	Shower Head	1
4.	Accessory Kit	1
5.	Silicone	1
6.	Screw	1
7.	Handle	1
8.	Base	1
9.	Body	1

Product Dimension (in mm)

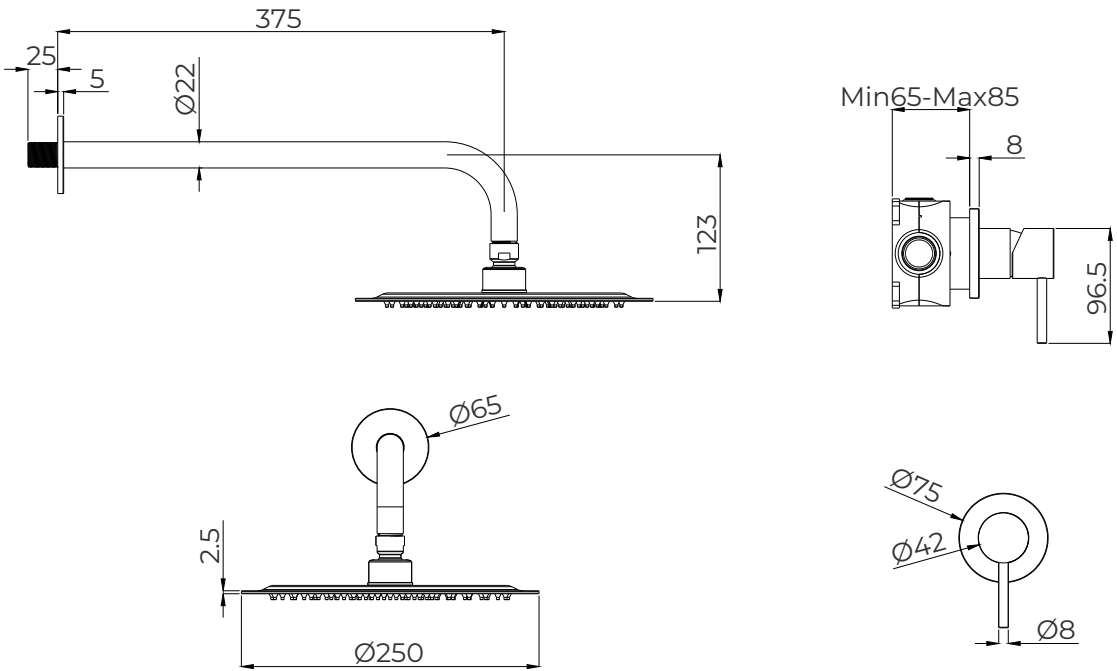


1.

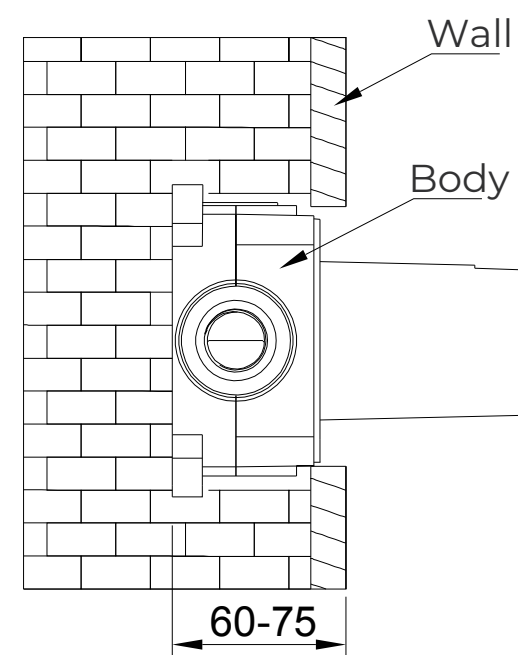


The body should be embedded at a depth of 60-75 mm from the finished wall surface.

2.

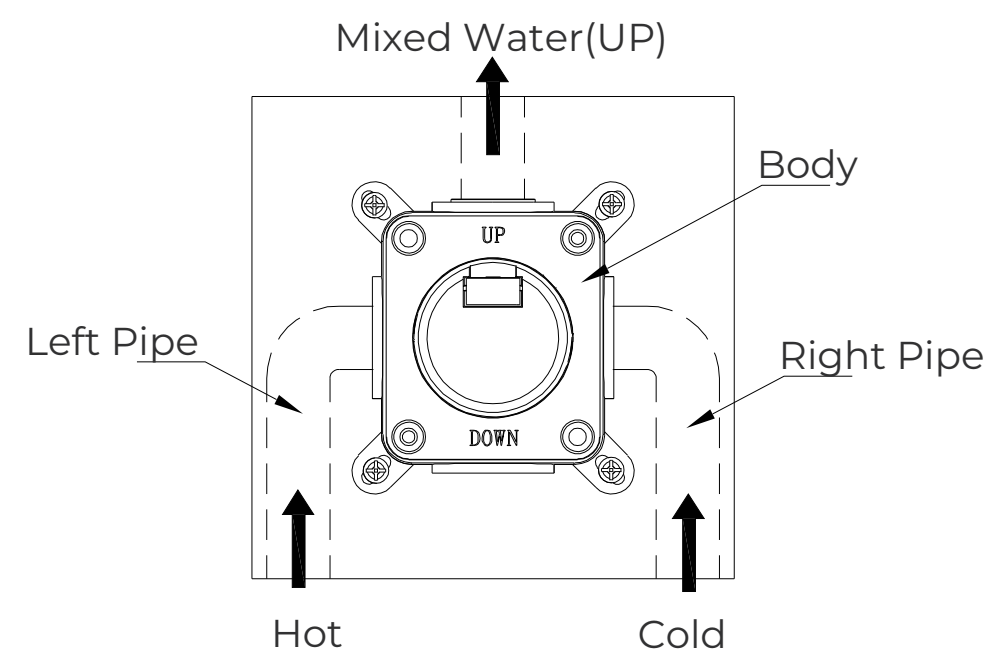


Connect the left water pipe to the hotwater supply and the right pipe to the cold water supply.

3.

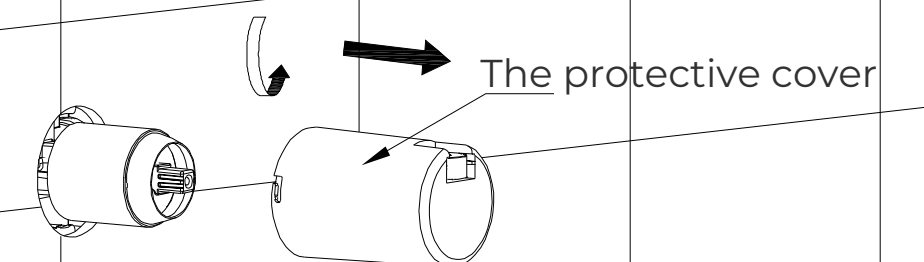

Remove the protective cover.

4.

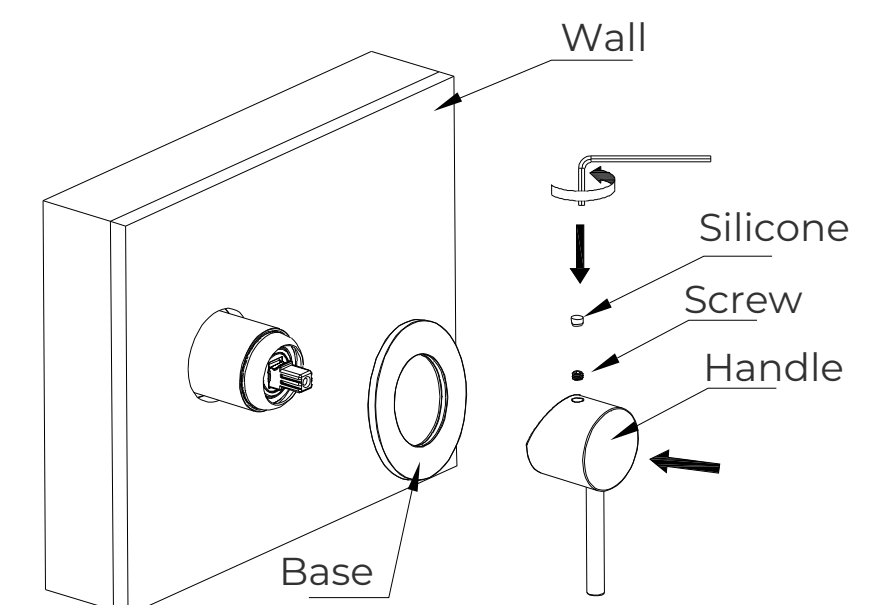

Attach the handle assembly to the valve stem. Use a hex key to tighten the fixing pin.